

HINGE CLAMPS MANUAL



MING SUEY PRECISION INDUSTRIAL CO., LTD.
 銘穗精密工業有限公司
www.rideaabikes.com
service@rideabikes.com

RIDEA
 RIDEA CYCLING
 November 2021

LFSBN S

Stainless Steel 108g

LFSBN T

Titanium 93g



LFSBN2 S

Stainless Steel 90g

LFSBN2 T

Titanium 75g




LFSBN3 S

Stainless Steel 130g


LFSBN3 T

Titanium 115g

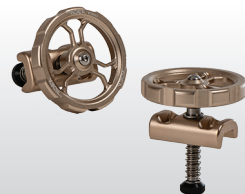

PARTS

A Handle

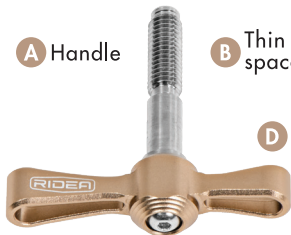

B Thin spacer



C Thick spacer



F Nut



D Clamp



E Spring



BASIC COLORS




SPECIAL COLORS




INSTALLATION




Remove the original hinge clamp.

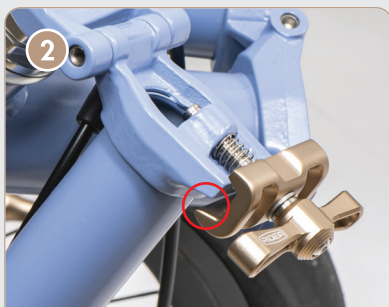

Insert the hinge clamp. The longer hook of the clamp should be aligned with the non-moving part of the frame.

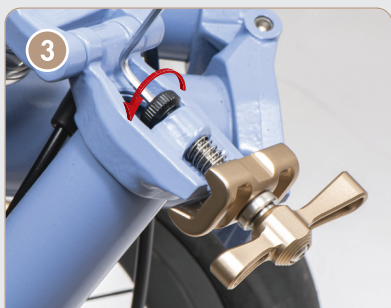

Use a 2,5 mm hex wrench to tighten the nut.

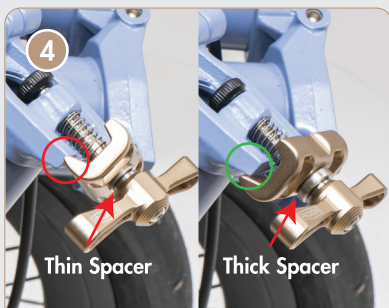

After the installation, check the clamping adjustment. If it is too loose, replace the thinner spacer with the thicker one.