



www.rideabikes.com service@rideabikes.com



RIDEA CYCLING |Q|

1st Edition October 2021

A Stainless steel axles

Product Parts























Installation



Remove front wheel and original pivot bolts.

Do not remove both original pivot bolts at the same time. Remove one original pivot bolt, then install the Ridea pivot bolt before proceeding with the other pivot bolt.



Insert the axle
(A). The axle has
a small screw that
shall be aligned
with the small
concavity of the



Place the cover (B) and thread the locking bolt (by hand at first). Tighten with a 5 mm hex wrench to 10 N·m. The hex socket is located in the threaded portion, insert the tool through the axle.



Once the pivot bolt is installed, check for correct adjustment.



If it is too loose, use the plastic spacer (D).



If it is too tight, use the brass spacer (E).



Installation is complete.