

HINGE CLAMP USER MANUAL

BIRDY ONLY




MING SUEY PRECISION INDUSTRIAL CO., LTD.
www.rideabikes.com · service@rideabikes.com

RIDEA

RIDEA CYCLING | Q

November 2021

Required tools

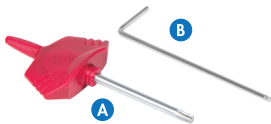

Required original parts



P/N: BRSTQL2

- A T20 wrench
- B 2mm hex wrench
- C Spacer
- D Cap
- E Bolt
- F Hinge clamp

BASIC COLORS



Installation



Remove the original hinge clamp. Keep the following original parts: spacer, cap, bolt.



Install the spacer first, then install Ridea hinge clamp and tighten the screws with a 2 mm hex wrench.



Install the original cap and tighten the bolt with a T20 wrench. Using mild threadlocker is recommended.



Installation is complete.