

# REAR MUDGUARD USER MANUAL

# RIDEA

## BIRDY ONLY



## Mudguard Extension

**Step 1**

Install the rear mudguard extension using the hardware provided. Nuts and washers are placed in the inner side. Use a 3 mm hex wrench to tighten the bolts.

**Step 2**

Installation is completed.

## Installation

### Step 1




Put the bike upside down, then remove the rear wheel and the original bolt.

### Step 2



Place mudguard frame in position. Temporarily fix it in position with the bolt and the conical washer. Do not tighten the bolt to final torque yet.

### Step 3

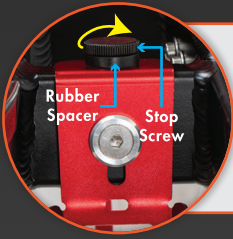

Rubber  
Spacer

Stop  
Screw

Tighten the stop screw and the rubber spacer by hand.

### Step 4



Now, tighten the bolt with a 4 mm hex wrench.

### Step 5



Please be aware of the clearance between the rear tire and the bolt. If there is not enough clearance, please use a thinner tire.

### Step 6



Installation is completed.