


RIDEA

P/N: SDSBRT

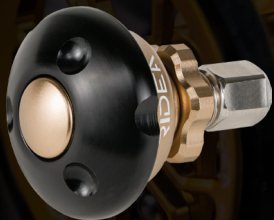

USER MANUAL

LOWER BROMPTON STOP DISC

RIDEA CYCLING · www.rideabikes.com
service@rideabikes.com · 1st Edition December 2021

BASIC COLORS

1

Black

3

Gold

4

Silver

M2


Matte Red

M8

Matte Bronze

M9

Matte Champagne

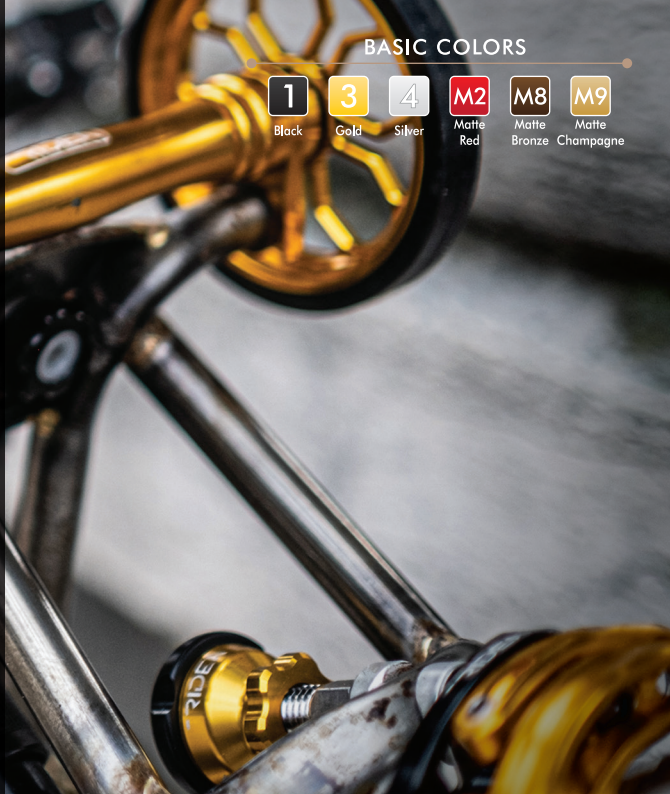

Installation




Place the rear brake spacer and the lower stop disc in position.



Press the rear brake lever to hold the rear caliper in braking position. Then tighten the bolt with a 10 mm wrench.



Fold the bike and adjust the lower stop disc to leave a gap of 1-2 mm between it and the seatpost.

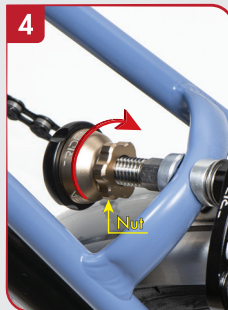

Tighten the nut (if needed, use a 19 mm wrench).