

RIDEA

P/N: SCA3

BASIC COLORS


- | | | | |
|-------|-----|------|--------|
| 1 | 2 | 3 | 4 |
| Black | Red | Gold | Silver |



USER MANUAL

CHAIN DEFLECTOR


RIDEA CYCLING · www.rideabikes.com
service@rideabikes.com · 1st Edition December 2021

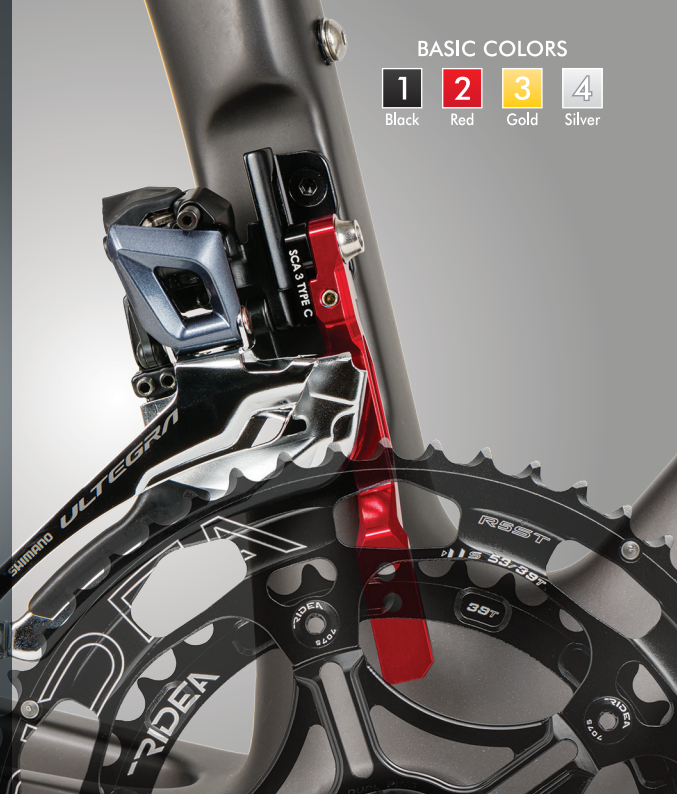


Installation



Undo the shifting cable and front derailleur. Attach the front derailleur and the SCA3 loosely to the frame (4 mm hex wrench). Note: a longer bolt is provided for special cases (like when FD shims and spacers are used).

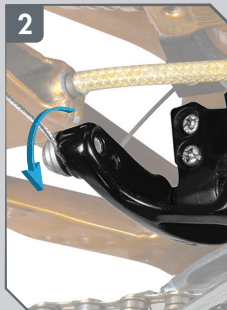

Fine tune the front derailleur following original manufacturer's instructions.

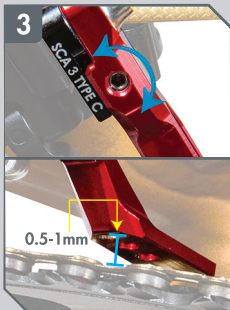

With a 2 mm hex wrench, fine tune the SCA3 position until its surface is 0.5-1 mm from the chain. Chain should be in the smallest chainring for this step.



Tighten the front derailleur bolt (4 mm hex wrench) to recommended torque (follow original manufacturer recommendation).