

RIDEA

— RSBR5 —




BROMPTON SUSPENSION BLOCKS **USER MANUAL**



www.rideabikes.com
service@rideabikes.com

BASIC COLORS

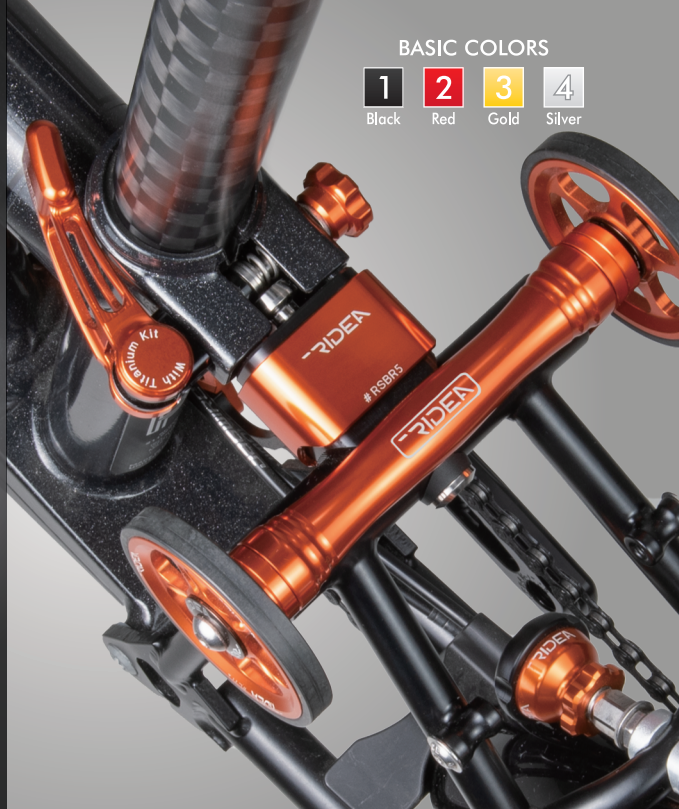

Installation



1

Material
Ti



2



3



4



5



6



7

Material
Ti



PU block (Hard)

Greater than
70 kgs applicable

For racing



PU block (Soft)

Less than
90 kgs applicable

For comfort

1



Assemble part 1 to 6.

2



Place the suspension
block and part 7 in
position on Brompton.
Then tighten the bolt
with 4mm wrench.
Installation is complete.